


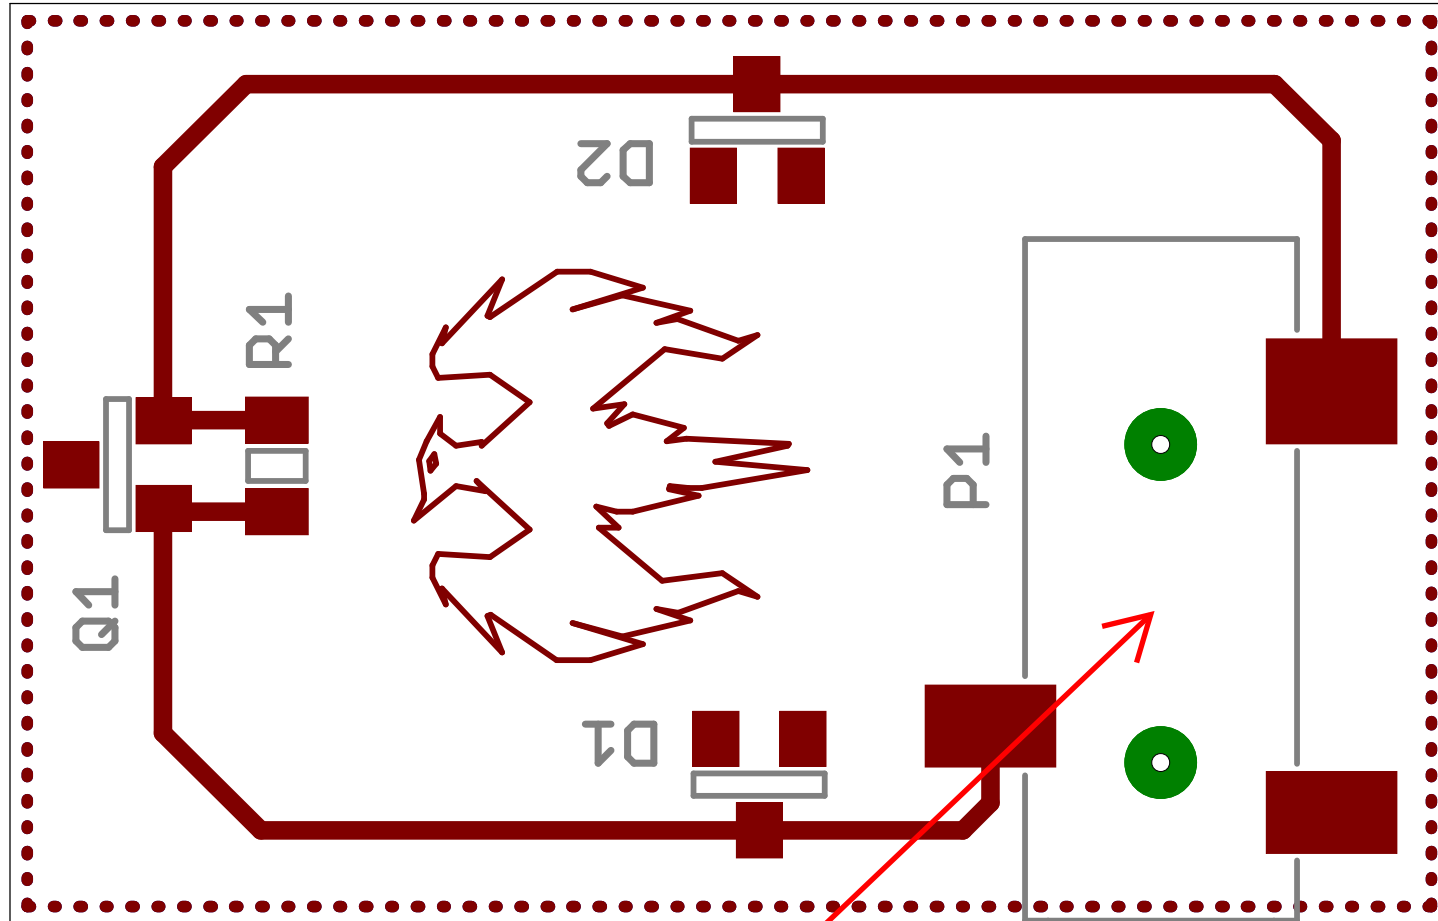

Solder P1 by hand